




## Assembly and use instructions

MZ02576GC

**Please read instructions carefully before assembly retain for future reference.**

### Assembly & Use

1. Fix the light on the fountain body.
2. Connect the flexible hose to pump outlet.
3. Connect the light cable and connecting pulg.
4. Connect the light and pump to transformer.
5. Fill the reservoir with water and take a note of the level that the water reaches for future reference when topping up.
6. Plug in and switch on, after a short while the water will start to flow.
7. Adjust the pump flow rate to achieve the desired effect. Adjust the pump flow rate to achieve the desired effect and to minimize any splashing. Splashing can occur if the flow rate is too high or the feature is too full. The flow rate can be increased or decreased by moving the flow rate control slider on the pump body. Moving the switch towards '+' will increase the flow rate and moving it towards '-' will decrease it.

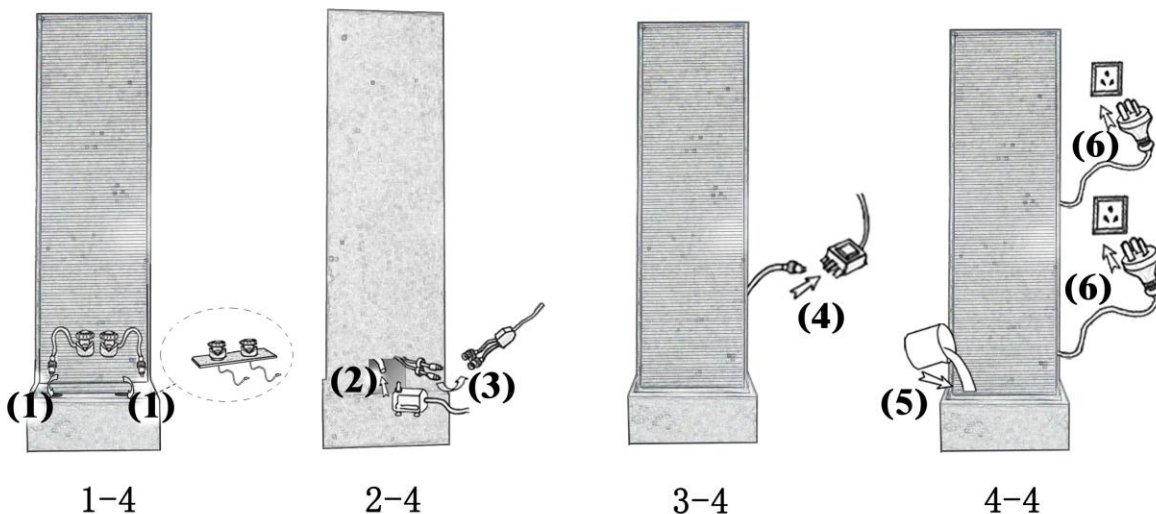

### Care and Maintenance

1. Check regularly that the water reservoir has sufficient water to cover the pump at all times. It will be necessary to check more frequently in warm or windy weather.
2. The pump must always be fully submerged in water (even when not in use) and never be permitted to run dry, as this will cause irreversible damage.
3. Do not allow the pump to freeze, during cold spells remove the pump from the water feature and place in a water filled container in a frost free position. DO NOT store the pump dry.
4. Periodically it will be necessary to change the water and clean the water feature and reservoir. The frequency of this will depend on the weather and location of the water feature. The outside of the water feature can be cleaned using a soft cloth and clean water and the reservoir with a soft brush. A mild detergent can be used but please note that this will cause the water to foam and should be avoided unless strictly necessary
5. The pump impeller will require cleaning at approximately monthly intervals, a good indication will be if the water flow rate drops. Switch off and unplug the water feature, remove the pump from the water reservoir and disconnect the water pipe. Remove the impeller cover from the front of pump body. Clean the impeller and housing in clean water using cotton buds. Reassemble the pump, reconnect the water pipe and reassemble the water feature.